

- Ⓓ Wechselintervall alle ...
- ⒼⒷ Replacement interval ...
- Ⓘ Sostituzione dopo ...
- Ⓕ Intervalle de replacement ...
- Ⓔ Intervalle de cambio ...
- ⒹⒻ Vervanging elke ...

15.000 KM /

10.000 MI

- Ⓓ ... oder nach 1 Jahr
- ⒼⒷ ... or after 1 year
- Ⓘ ... or dopo 1 anno
- Ⓕ ... ou 1 fois par an
- Ⓔ ... o después de 1 ano
- ⒹⒻ ... of 1 keer per jaar

<b>Honda Civic</b>	<b>09.94</b>	➔
<b>Honda CRV</b>	<b>10.95</b>	➔
<b>Rover 400</b>	<b>10.95</b>	➔
<b>Rover 45</b>	<b>02.00</b>	➔

80000428 / CC1067 / MC 580  
21652345 / CP1067 / MP 080

### Einbauanleitung

Innenraumfilter

### Fitting instructions

Cabin air filter

### Istruzioni di montaggio

Filtro abitacolo

### Notice de montage

Filtre d'habitacle

### Instrucciones de montaje

Filtro de habitáculo

### Inbouwhandleiding

Interieurfilter

▼ Honda Civic / Rover 45, 400 ▼

▼ Honda CRV ▼

▼ Honda CRV ▼

