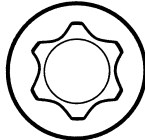
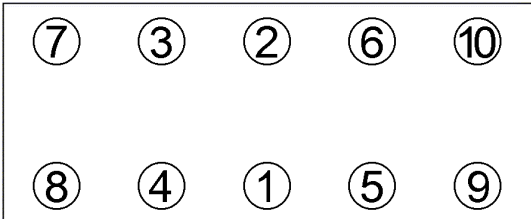


Anziehvorschrift für Zylinderkopf		718.321 passend für / suitable for adaptable à / adaptable a Peugeot	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
			
330.390 M 11x1,5x147			
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤	Pos. 1-10: 20 Nm Pos. 1-10: 40 Nm Pos. 1-10: 130° Pos. 1-10: 130°	
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ ☐ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor			
Ø: 76,3 mm; ⅝: 1,30 mm			
Mot: DV6BTED, DV6CTED, DV6DTED, DV6C 9HD, 9HF, 9HL, 9HP, 9HR 1.6 ltr. HDi, 66-85 kW (90-116 PS)			
Peugeot 2008, 3008, 5008, Partner Peugeot 207, 208, 301, 308, 508			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*718.321*	