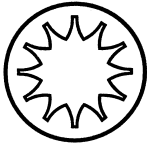
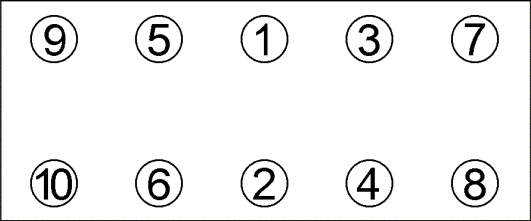


Anziehvorschrift für Zylinderkopf Tightening Instructions for Cylinder Head Instructions de serrage pour culasse Prescripciones de apriete para culatas		721.972 passend für / suitable for adaptable à / adaptable a VW / Audi		 Das Original													
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete															
 445.910 M9x140x1,5																	
<table border="0"> <tr> <td>Anziehen/</td> <td>✱</td> <td>40 Nm</td> </tr> <tr> <td>Tightening/</td> <td>➤</td> <td>90°</td> </tr> <tr> <td>Serrage/</td> <td>➤</td> <td>90°</td> </tr> <tr> <td>Apriete</td> <td>➤</td> <td>90°</td> </tr> </table>						Anziehen/	✱	40 Nm	Tightening/	➤	90°	Serrage/	➤	90°	Apriete	➤	90°
Anziehen/	✱	40 Nm															
Tightening/	➤	90°															
Serrage/	➤	90°															
Apriete	➤	90°															
Zeichenerklärung / Explanations / Explication / Explicacion																	
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos													
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)													
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo													
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera													
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro													
Motortyp / Engine type / Type de moteur / Tipo de motor 1,4 TFSI Mot. CPTA, CPVA, CPWA, CMBA, CXSA, CXSB, CHPA, CNLA, CRJA, A1, A3, Q3, Jetta, Golf VII, Polo Oktavia, Ibiza, Leon																	
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*721.972*														